

30kW Charger error Code

CHARGER REASON	CODE
NoError	1
Emergency Press,	2
ResetKey,	3
Door Open	4
GND Falut,	5
AC_Over_Voltage,	6
AC_Under_Voltage,	7
AC_Over_Current,	8
Isolation_Warning,	9
RESERVED	10
Communication_Error,	11
EV_Disconnected,	12
StopByPassword,	13
StopByRfid,	14
StopByRemote,	15
StopByTimetoCharge,	16
StopByUnittoCharge,	17
MeterFailure,	18
PowerSwitchFailure,	19
Connect,	20
Charging,	21
Disconnect,	22
Available,	23
RCDdetect,	24
cuttofSoc,	25
stopByTempreture,	26
WaitForACMains,	27
TimeOut,	28
RESERVE	29
FullCharge,	30
Isolation_Fault,	31
EVNotReadyToCharge,	32
STAGE_B_DETECTED,	33
STAGE_UNDEFINE,	34

HardReset,	35
SoftReset,	36
HardReset_Done,	37
Voltage_MissMatch,	38
RetrySession,	39
ChangeAvailibility,	40
UnAvailable,	41
Available,	42
PowerModuleFAIL,	43
NetworkFlutuate	44
PLC ERROR CODE	
SIG_ERROR_CP_PP	101
RECEIVED_RESET_BOARD	102
MSG_RX_TIMEOUT	107
MSG_ERROR_WRONG_ID	108
INIT_ERROR_UNKNOWN_STATE	109
WAIT_ERROR_UNKNOWN_STATE	110
SLAC_ERROR_UNKNOWN_STATE	111
SDP_ERROR_UNKNOWN_STATE	112
SDP_BIND_ERROR_UNKNOWN_STATE	113
V2G_ACCEPT_UNKNOWN_STATE	114
V2G_HANDSHAKE_UNKNOWN_STATE	115
V2G_ERROR_UNKNOWN_STATE	116
INIT_ERROR_IFADDR	117
INIT_ERROR_THREAD	118
INIT_ERROR_OPENCHANNEL	119
INIT_ERROR_KEY	120
J1772_ERROR_UNKNOWN_STATE	121
CHADEMO_ERROR_UNKNOWN_STATE	122
CHADEMO_RX_ERROR_UNKNOWN_STATE	123
CHADEMO_TX_ERROR_UNKNOWN_STATE	124
INIT_ERROR_GENERAL	125
SLAC_ERROR_INIT	132
SLAC_ERROR_TIMER_INIT	133
SLAC_ERROR_TIMER_TIMEOUT	134
SLAC_ERROR_TIMER_MISC	135

SLAC_ERROR_PARAM_TIMEOUT	136
SLAC_ERROR_PARAM_SOCKET	137
SLAC_ERROR_START_ATTEN_CHAR_TIMEOUT	138
SLAC_ERROR_MNBC_SOUND_TIMEOUT	139
SLAC_ERROR_ATTEN_CHAR_TIMEOUT	140
SLAC_ERROR_ATTEN_CHAR_SOCKET	141
SLAC_ERROR_VALIDATE_1_TIMEOUT	142
SLAC_ERROR_VALIDATE_1_SOCKET	143
SLAC_ERROR_VALIDATE_2_TIMEOUT	144
SLAC_ERROR_VALIDATE_2_SOCKET	145
SLAC_ERROR_BCB_TOGGLE_TIMEOUT	146
SLAC_ERROR_MATCH_TIMEOUT	147
SLAC_ERROR_MATCH_SOCKET	148
SLAC_ERROR_READ_SOCKET	149
SLAC_ERROR_SET_KEY	150
SLAC_ERROR_LINK_DETECT	151
SDP_ERROR_GENERAL	164
SDP_ERROR_INIT_SOCKET	165
SDP_ERROR_INIT_SOCKOPT1	166
SDP_ERROR_INIT_SOCKOPT2	167
SDP_ERROR_INIT_BIND	168
SDP_ERROR_THREAD_SOCKET1	169
SDP_ERROR_THREAD_SOCKET2	170
SDP_ERROR_TIMEOUT	171
DIN_ERROR_GENERAL	180
DIN_TCP_SOCKET_MAY_CLOSED	181
DIN_ERROR_INIT_SOCKOPT	182
DIN_ERROR_INIT_BIND	183
DIN_ERROR_INIT_LISTEN	184
DIN_ERROR_INIT_SELECT	185
DIN_ERROR_INIT_ACCEPT	186
DIN_ERROR_TIMEOUT	187
DIN_ERROR_V2GTP_HEADER	188
DIN_ERROR_V2GTP_HEADER_LEN	189
DIN_ERROR_DECODE_EXI	190
DIN_ERROR_CREATE_RESPONSE	191
DIN_ERROR_ENCODE_EXI	192

DIN_ERROR_V2GTP_HEADER_WRITE	193
DIN_ERROR_SOCKET_EXCEPTION	194
DIN_ERROR_SOCKET_SEND	195
DIN_ERROR_NO_PROTOCOL	196
UNKNOWN_SESSION	197
SEQUENCE_ERROR	198
DIN_SHUTDOWN_BY_EVSE	199